CATERPILLAR

SERVICE MANUAL

160M 2 MOTOR GRADER

Printed by
Heavy Equipment Manuals
v2.20

Printed in U.S.A

Heavy Equipment Manuals

Product: MOTOR GRADER
Model: 160M 2 MOTOR GRADER R9T
Configuration: 160M Series 2 MOTOR GRADER R9T00001-UP (MACHINE)

Disassembly and Assembly
12M Series 2, 140M Series 2 and 160M Series 2 Motor Graders Machine Systems
Media Number -KENR8897-04 **Publication Date -01/04/2015** **Date Updated -02/04/2015**

i02816597

Steering Frame Lock - Separate and Connect

SMCS - 7506-029

Connection Procedure

WARNING

No clearance for person in this area when machine turns. Severe injury or death from crushing could occur.

Note: The steering frame lock prevents the machine from articulating.

Note: Install the frame lock pin in the LOCKED position before you perform any of the following operations:

- Lift the machine.
- Transport the machine.
- Perform any work near the center of the machine.

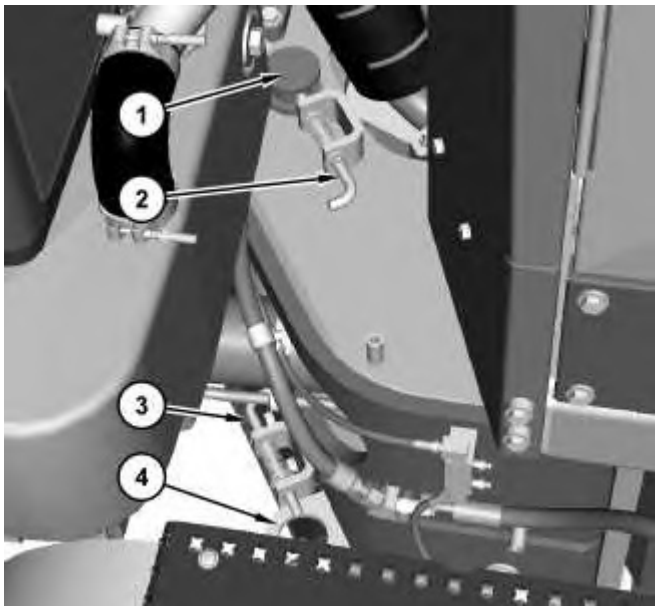

Illustration 1 g01404643

1. Pull back spring rod (3) in order to remove frame lock pin (1) from storage bracket (4).
2. Pull back spring rod (2) and install frame lock pin (1) into the LOCKED position. Secure frame lock pin (1) in the LOCKED position with spring rod (2).

Separation Procedure

WARNING

No clearance for person in this area when machine turns. Severe injury or death from crushing could occur.

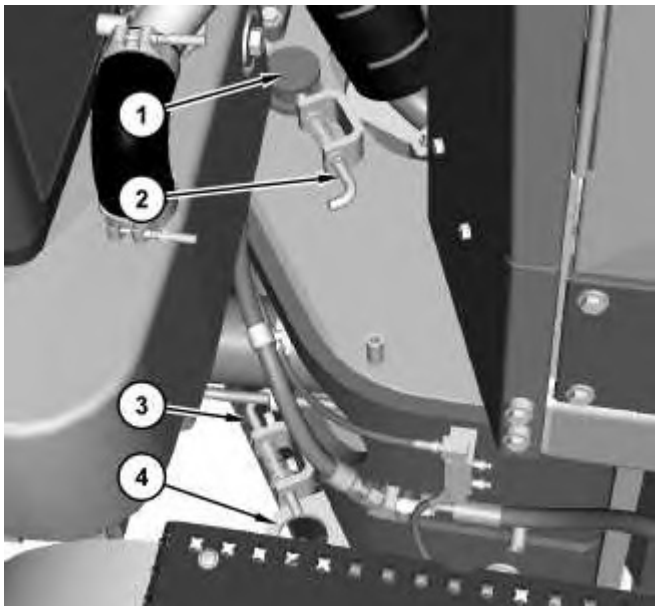

Illustration 2 g01404643

1. Pull back spring rod (2) in order to remove frame lock pin (1) from the LOCKED position.
2. Pull back spring rod (3) and install frame lock pin (1) into storage bracket (4). Secure frame lock pin (1) in storage bracket (4) with spring rod (3).

Copyright 1993 - 2025 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Tue May 13 01:58:14 UTC+0530 2025

Product: MOTOR GRADER
Model: 160M 2 MOTOR GRADER R9T
Configuration: 160M Series 2 MOTOR GRADER R9T00001-UP (MACHINE)

Disassembly and Assembly
12M Series 2, 140M Series 2 and 160M Series 2 Motor Graders Machine Systems
Media Number -KENR8897-04 **Publication Date -01/04/2015** **Date Updated -02/04/2015**

i04112353

Battery - Remove and Install

SMCS - 1401-010

Removal Procedure

WARNING

Personal injury can result from failure to disconnect the battery.

First, disconnect the negative battery cable. Then, disconnect the positive battery cable.

A positive power lead can cause sparks if the battery is not disconnected. Sparks can possibly result in battery explosion or fire.

1. Turn the key for the battery disconnect switch to the OFF position. Remove the key.

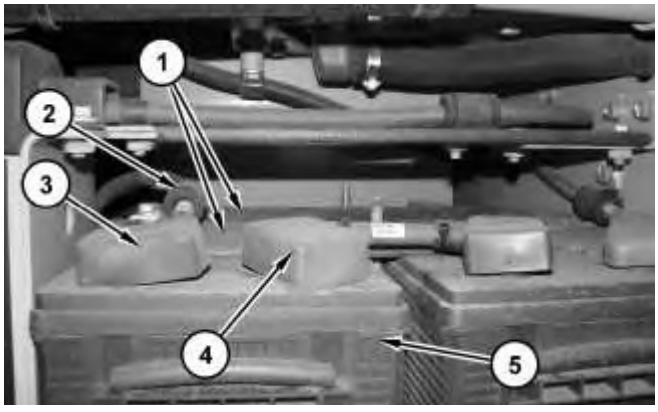

Illustration 1 g02316376

2. Remove hold-downs (1). Remove clip (2). Disconnect cable assemblies (3) and (4). Use two people in order to remove battery (5). The weight of battery (5) is approximately 54 kg (120 lb).

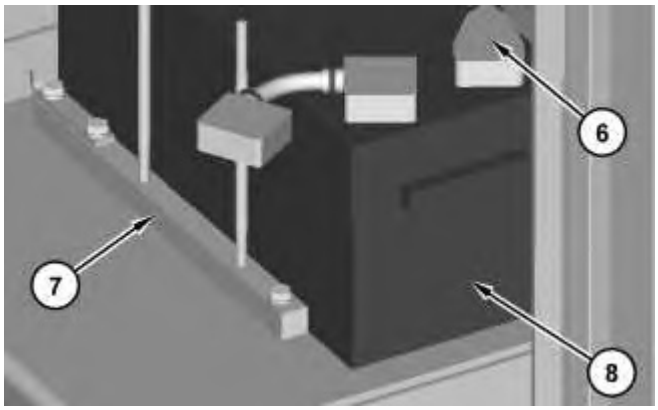

Illustration 2 g02316473

3. Disconnect cable assembly (6). Remove block (7). Use two people in order to remove battery (8). The weight of battery (8) is approximately 54 kg (120 lb).

Installation Procedure

1. Install batteries (5) and (8) in the reverse order as the removal.

Copyright 1993 - 2025 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Tue May 13 01:58:24 UTC+0530 2025

This is the sample of the manual click on the download link for complete manual

DOWNLOAD LINK

For some reason if link does not work download this pdf and then click

Product: MOTOR GRADER
Model: 160M 2 MOTOR GRADER R9T
Configuration: 160M Series 2 MOTOR GRADER R9T00001-UP (MACHINE)

Disassembly and Assembly
12M Series 2, 140M Series 2 and 160M Series 2 Motor Graders Machine Systems
Media Number -KENR8897-04 **Publication Date -01/04/2015** **Date Updated -02/04/2015**

i03251187

Duo-Cone Conventional Seals - Install

SMCS - 7561-012-SA; 7561-012; 7561-016

Assembly and Installation of Conventional Duo-Cone Seals

This instruction provides the procedure for assembling and installing conventional Duo-Cone Seals.

When the Duo-Cone Seals are installed and assembled, you must use the correct procedures. The Duo-Cone Seal may fail from one or more mistakes that are made during assembly or during installation of the seal components.

Reference: Special Instruction, SEHS8484, "Tool and Specification Chart for Conventional Duo-Cone Seals"

Required Tools

Use the tools in Table 1 in order to correctly measure the spacing of the Duo-Cone Seals after the seals are installed.

Table 1

Required Tools			
Item	**Part Number**	**Description**	**Qty**
10	6V-3075	Dial Indicator	1
11	6V-6167	Contact Point	1
12	3P-1565	Collet Assembly	1
13	165-8958	Dial Indicator Base	1

Correct Assembly of Conventional Duo-Cone Seals

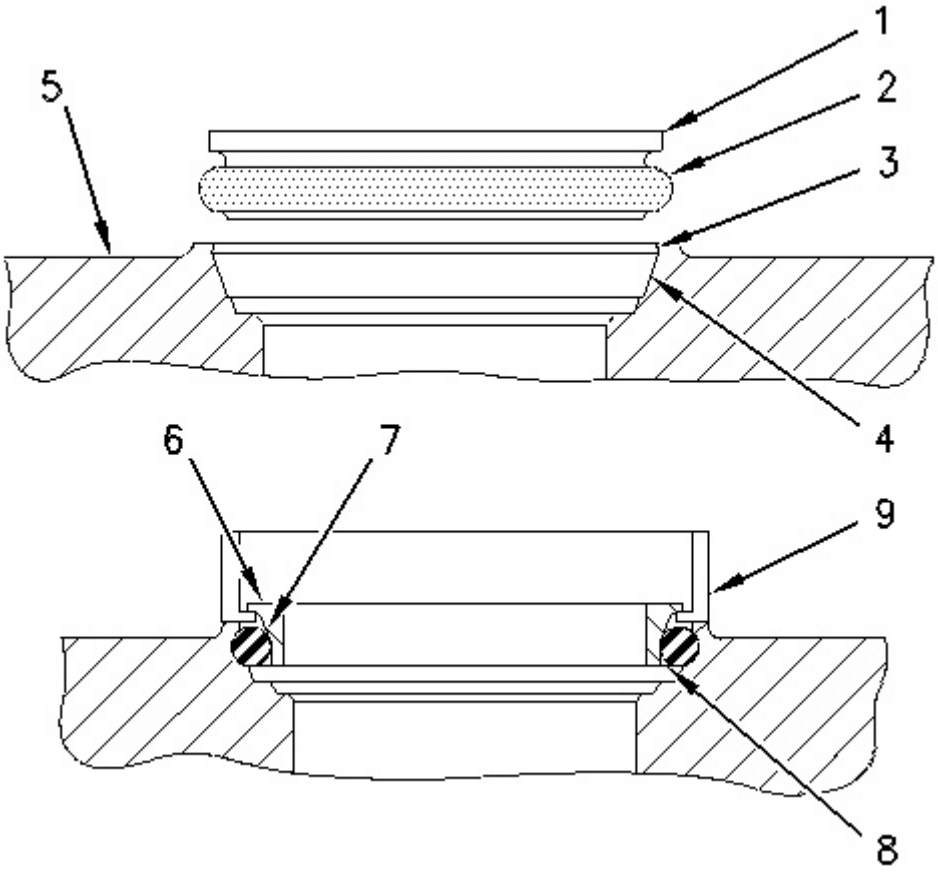

Illustration 1 g00446486

(1) Seal ring
(2) Rubber toric ring
(3) Housing retaining lip
(4) Housing ramp
(5) Seal ring housing
(6) Seal ring face
(7) Seal ring ramp
(8) Seal ring retaining lip
(9) Installation tool

Assembly and Installation Procedure

WARNING

Avoid prolonged skin contact with isopropyl alcohol. Avoid breathing the vapors in enclosed areas without adequate ventilation and do not smoke.

Isopropyl alcohol is flammable. Do not use near open flame, welding operations, or around heated surfaces exceeding 482°C (900°F).

1. Remove any film, dust or other foreign matter from the following components:
    - Rubber toric ring (2)
    - Housing ramp (4)
    - Seal ring ramp (7)
    - Housing retaining lip (3)
    - Seal ring retaining lip (8)
    - Seal ring housing (5)

Note: Seal rings have very sharp edges. Protective gloves should be worn in order to prevent injury.

Use isopropyl alcohol or other approved cleaning agents. Use a clean lint free cloth for wiping. All components should be completely dry before proceeding.

Note: Never permit oil to contact rubber toric ring (2), housing ramp (4) or seal ring ramp (7) before both seal rings (1) are assembled in the final position.

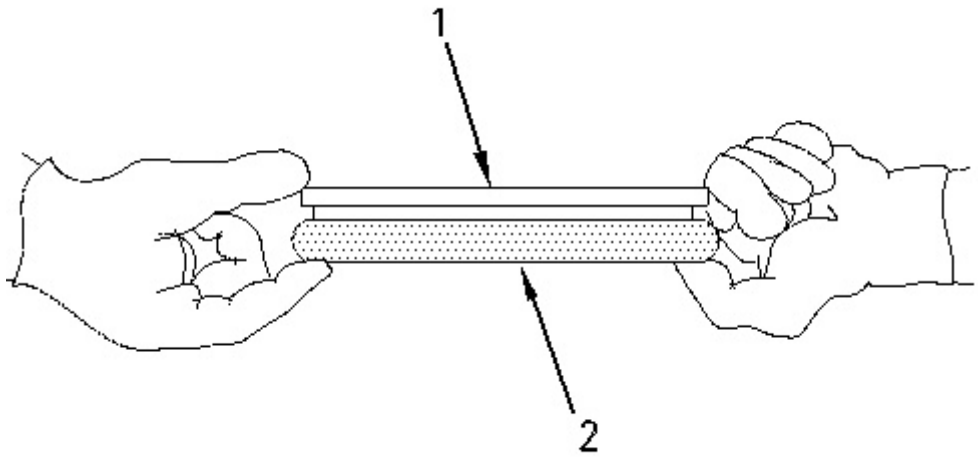

Illustration 2 g00534617

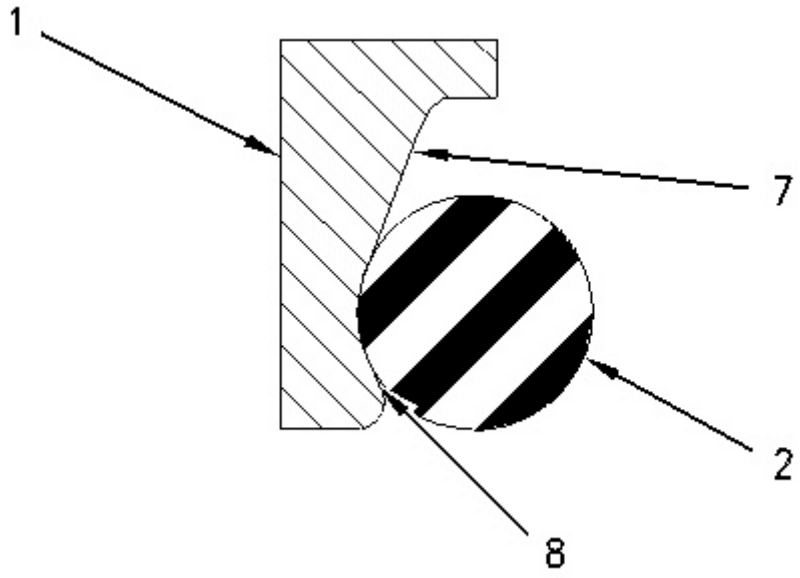

Illustration 3 g00446488

2. Put rubber toric ring (2) on seal ring (1). Make sure that the rubber toric ring is positioned at the bottom of seal ring ramp (7). The rubber toric ring must rest against retaining lip (8). The rubber toric ring must be straight in the seal ring. The rubber toric ring must not be twisted.

   Note: Be careful when you are working on the rubber toric ring. Nicks, cuts or scratches may cause leaks.

3. Refer to Special Instruction, SEHS8484, "Tool and Specification Chart for Conventional Duo-Cone Seals" in order to select the proper installation tool.

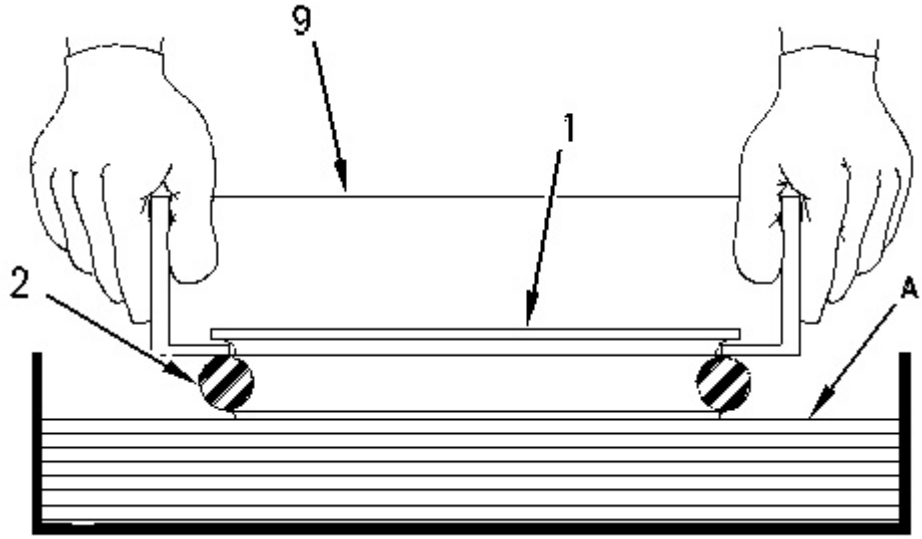

Illustration 4 g00534621

Use towels or a mat (A) that is made of foam in order to aid in the installation of toric ring (2).

4. Use Tooling (9) to install rubber toric ring (2) on seal ring (1). Lightly dampen the lower half of rubber toric ring (2) with an appropriate lubricant. Refer to the "Acceptable Lubricants for Assembly" in this publication for additional information. Use the following procedure in order to dampen the rubber toric ring:

    - Wipe the seal with a lint free cloth.
    - Place towels or a mat that is made of foam at the bottom of a container. Soak the towels or the mat with the lubricant. Dip the rubber toric seal in the container.

    Note: Periodically inspect the installation tool for damage. If necessary, replace the installation tool .

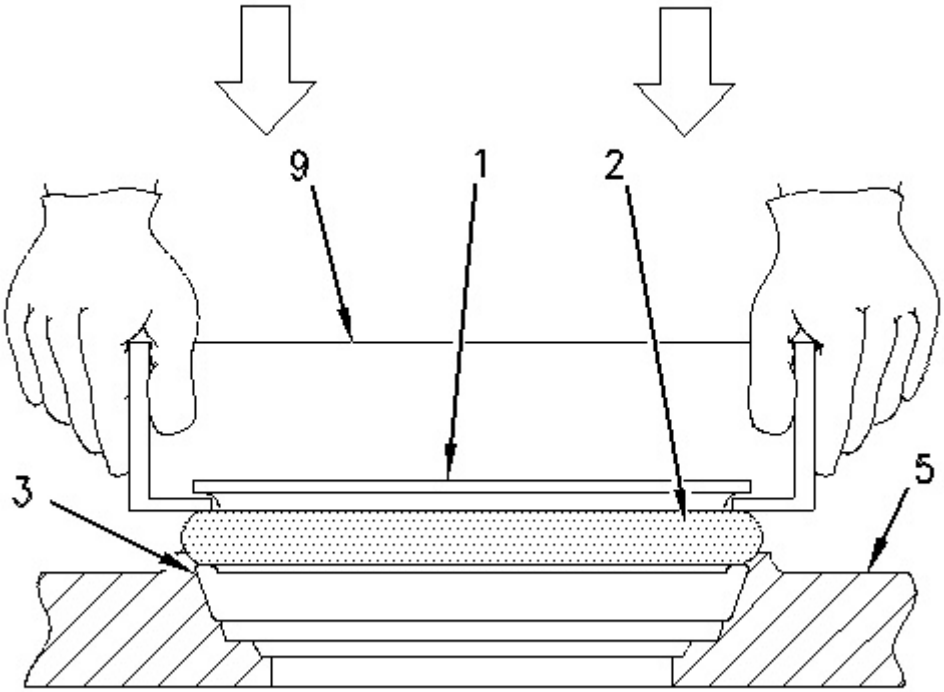

Illustration 5 g00534622

5. Make sure that the lower half of rubber toric ring (2) is still wet. Use Tooling (9) in order to position seal ring (1) and rubber toric ring (2) squarely against seal ring housing (5). Make sure that you use sudden pressure and even pressure when you press a toric ring that has a small diameter. Press rubber toric ring (2) under housing retaining lip (3) that is part of seal ring housing (5). Use the following procedure in order to install a rubber toric ring that has a large diameter:

    - Push the rubber toric ring over the seal ring retaining lip on one side.
    - Tap the installation tool with a rubber mallet on the opposite side of the rubber toric ring. Tap until the rubber toric ring is past the seal ring retaining lip of the housing.

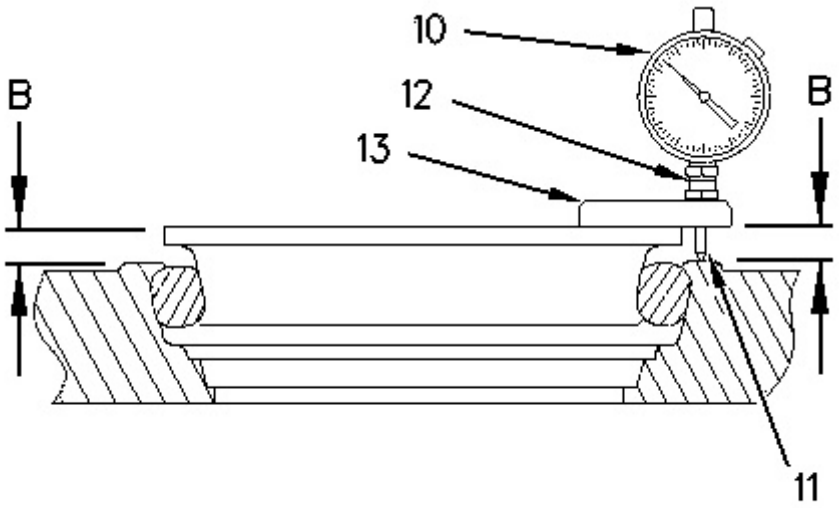

Illustration 6 g00534720

(B) Assembled height
(10) Dial indicator
(11) Contact point
(12) Collet assembly
(13) Dial indicator base (plastic)

6. Check assembled height (B) at four locations that are 90 degrees from each other. Use a calibrated **6V-3075** Dial Indicator and the related tools in Table 1 in order to measure the assembled height. The difference in height must not exceed 1.0 mm (0.04 inch). Refer to Illustration 6.

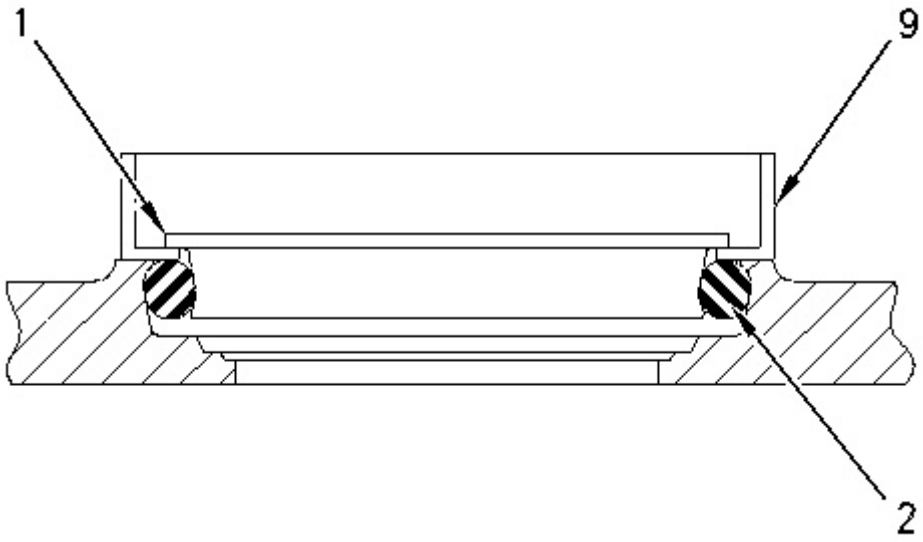

Illustration 7 g00446492

7. Do not adjust the seal ring (1) by pushing on the seal ring or by pulling on the seal ring. Use Tooling (9) in order to push down on the seal.

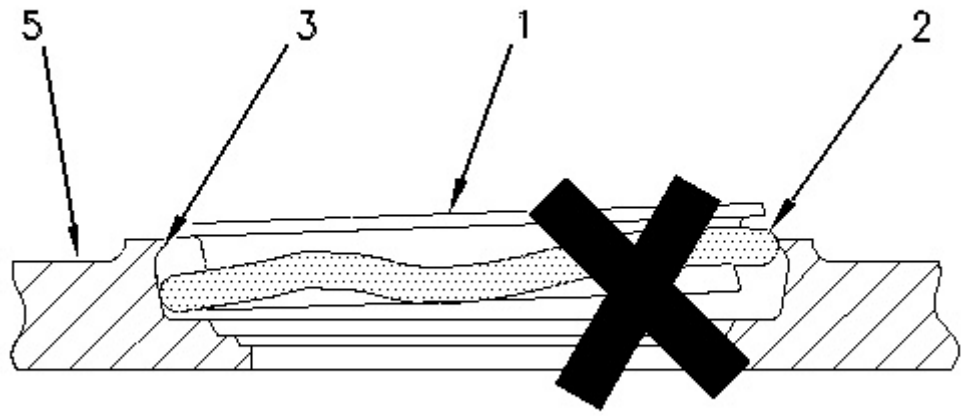

Illustration 8 g00446493

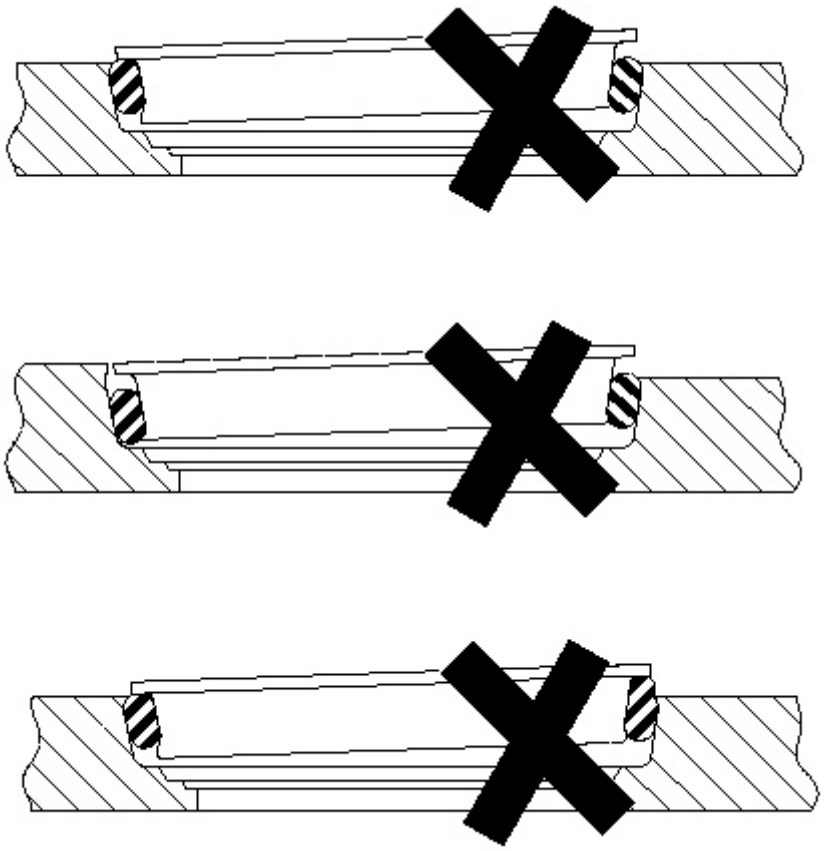

Illustration 9 g00446494

Examples of incorrect assembly

8. Rubber toric ring (2) may twist during installation if the seal is not completely wet or if there are burrs or fins on housing retaining lip (3) that is part of seal ring housing (5). Misalignments, twists and bulges of the rubber toric ring will cause Duo-Cone Seal failures. If correct installation is not obvious, remove the toric ring from the housing and repeat the installation procedure.

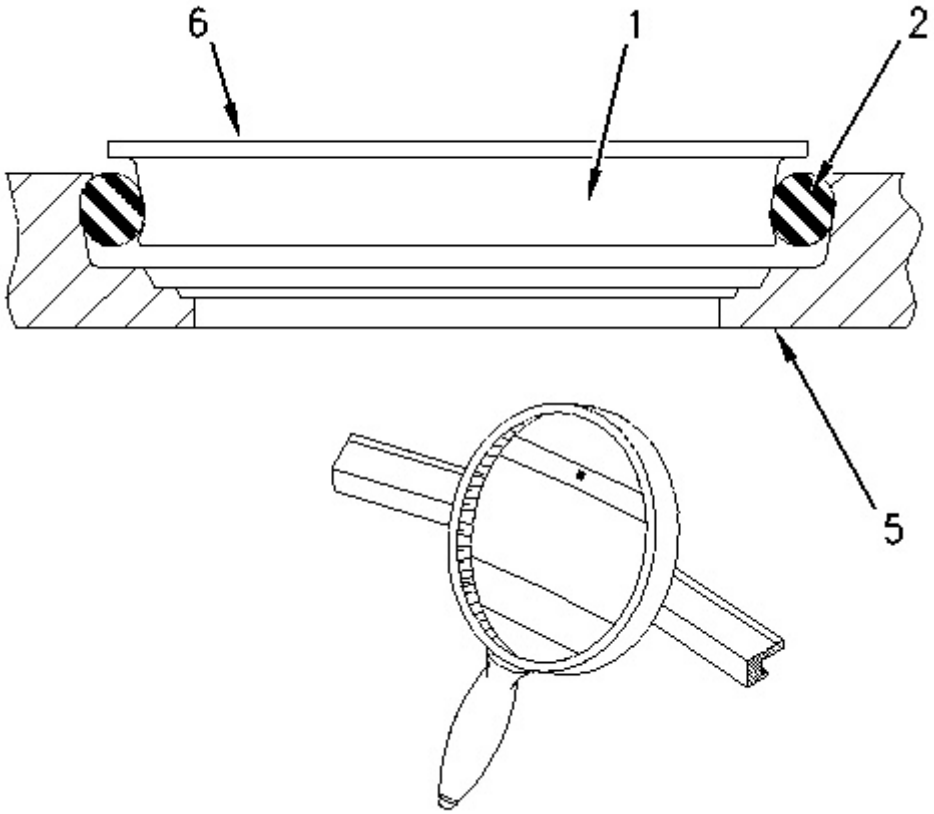

Illustration 10 g00446495

9. Wipe seal ring face (6) that is part of seal rings (1) by using a lint free cloth. No particles of any kind are permissible on the sealing surfaces. A small piece of paper from a paper towel can force apart the seal ring face, which will cause a leak.

   Note: Rubber toric ring (2) must never slip on the ramps of seal ring (1) or the ramps of seal ring housing (5). In order to prevent slippage, allow adequate time for evaporation of the lubricant before proceeding with the procedure. Once the rubber toric ring is correctly positioned, the rubber toric ring must roll only on the ramps.

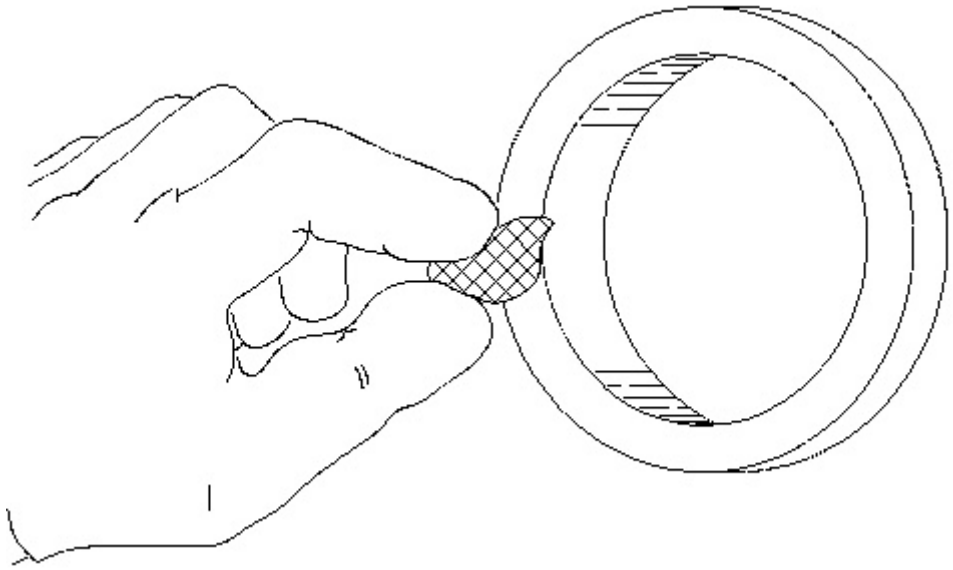

Illustration 11 g00534623

10. Apply a thin film of clean oil on the entire seal ring face of one or both seals. Use a lint free cloth or brush in order to distribute the oil evenly. Be careful not to get any oil on the rubber toric rings. Lubricate the seal faces by using the same oil that was used during assembly. Dye may have been used in the oil that was used during assembly. Use the same kind of oil without dye in order to lubricate the seal faces.

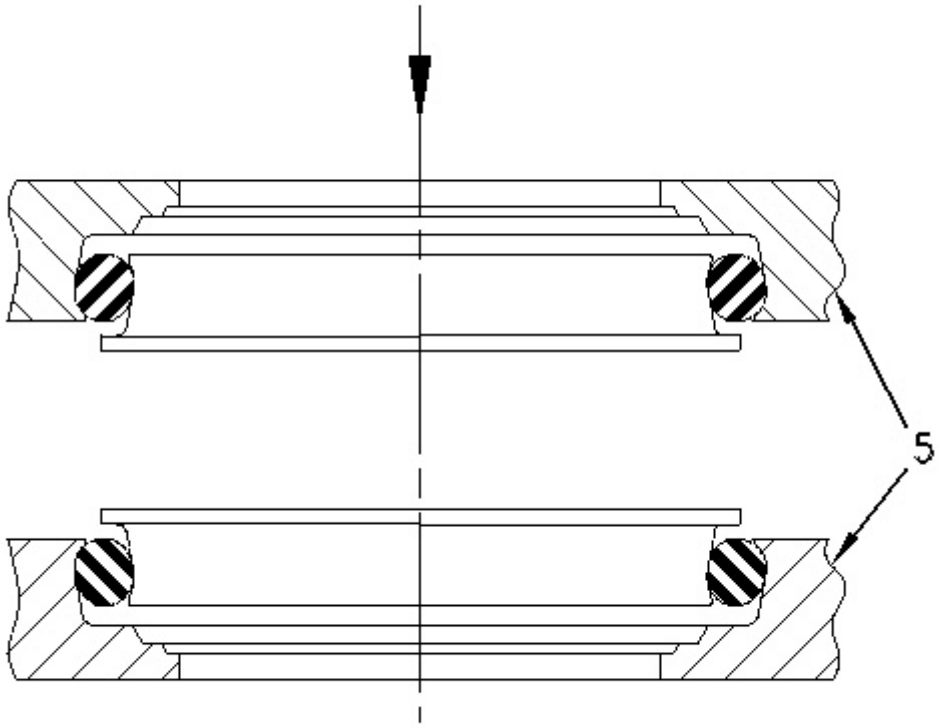

Illustration 12 g00446497

11. Make sure that both seal ring housings (5) are in correct alignment and that the seal ring housings are concentric. Move the parts slowly and move the parts carefully toward each other.

    Note: Do not force the seal ring and the seal ring housing together in a sudden manner. The seal component could be scratched or the seal component could be broken if the components are slammed together.

12. Tighten the bolts after the components are in the correct position.

Acceptable Lubricants for Assembly

WARNING

Avoid prolonged skin contact with isopropyl alcohol. Avoid breathing the vapors in enclosed areas without adequate ventilation and do not smoke.

Isopropyl alcohol is flammable. Do not use near open flame, welding operations, or around heated surfaces exceeding 482°C (900°F).

Note: Do not use any liquid that leaves an oil film. Do not use any liquid that does not evaporate quickly. All of the guidelines for safety and all of the guidelines for disposal must be followed when you use a flammable liquid. The following liquids are acceptable lubricants for assembly:

- Quaker Solvo Clean 68-0
- Houghto-Grind 60 CT
- Isopropyl alcohol

Some seal kits come with silicone toric rings. Silicone toric rings can be chilled for easier installation. This will allow the toric ring to contract for easier installation.

Seals should be placed in a freezer for 5 minutes. Temperature in the freezer should be between −40°C (−40°F) to −18°C (0°F). Chilling should be done prior to installation. Contraction will be sufficient to allow installation. The seals should be allowed to warm to room temperature prior to further assembly.

Result of Incorrect Assembly

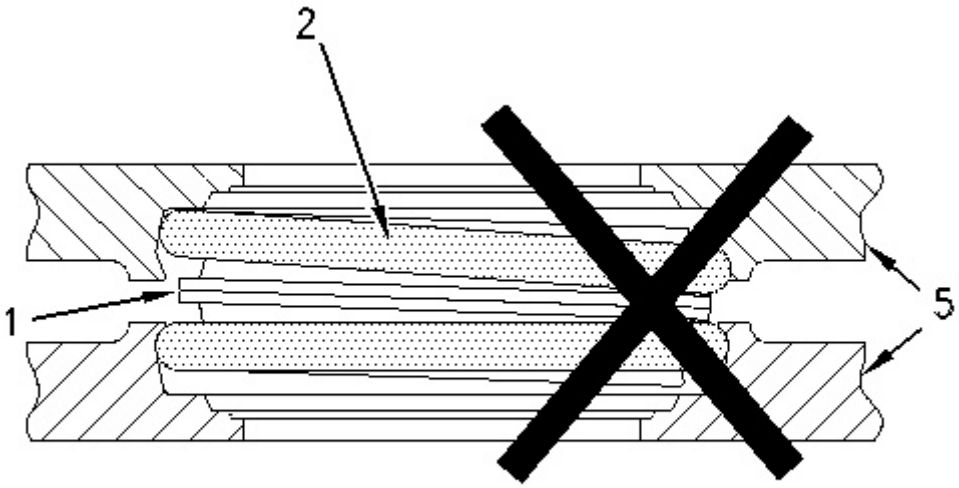

Illustration 13 g00446498

The slipping of the rubber toric ring on the housing ramp or on the seal ring ramp may result in uneven pressure on the seal face. Uneven pressure on the seal face causes galling, scoring, and leakage.

If the rubber toric ring slips at one location but not all the way around the seal ring, the toric ring will twist.

The twisted toric ring could be cocked. Seals that are cocked will cause uneven pressure on the seal face. Seals that are cocked may also cause possible galling, scoring, and leakage.

The twisted toric ring could oscillate when the ring is rotated. Seals that oscillate may allow dirt into the seal joint. This is caused by the pumping action that is created by the toric ring that is oscillating.

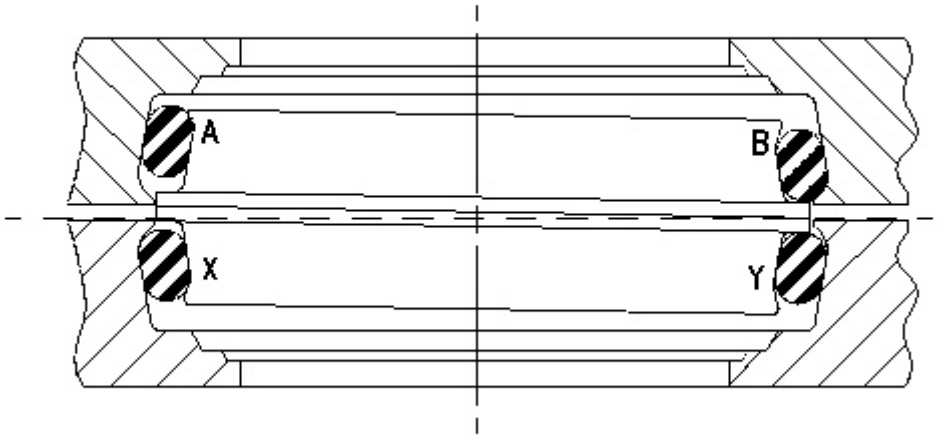

Illustration 14 g00446499

Illustration 14 shows a toric ring that is assembled incorrectly. The upper housing is stationary. The lower housing is rotating.

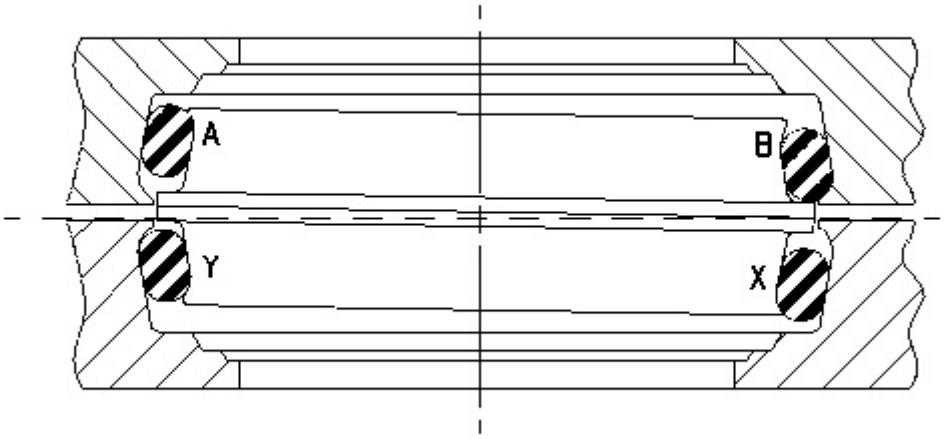

Illustration 15 g00446500

Illustration 15 shows the same seal after the lower housing has rotated 180 degrees. In this position, there will be high pressure at point (B) and at point (X). These points of high pressure may result in galling of the toric rings. There will be low pressure at point (A) and at point (Y) which will result in possible leakage.

Copyright 1993 - 2025 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Tue May 13 01:58:36 UTC+0530 2025

This is the sample of the manual click on the download link for complete manual

DOWNLOAD LINK

For some reason if link does not work download this pdf and then click